 


## im Vertrieb von IR 701 Remote Control Instruction Guide

Install two AAA batteries as shown at right.



### Operation

The buttons on the IR 701 duplicate the System 75C's front panel controls for normal operation. See the other side of this card for details. The switcher responds to commands from the IR 701 as if that button or knob were pressed or rotated on the switcher. From a distance of no more than 30 feet, the IR 701 sends infrared (IR) signals to the System 75C via the switcher's front panel IR port or the IR port of an optional SCP 200 or SCP 250 control pad.

**NOTE** Setup operations cannot be performed from the IR 701.

The three Display buttons (**Power**, **Mute**, and **Mode**) will not function until IR and/or RS-232 commands have been stored in their memories. Each Display button can also have a Room command associated with it. Each Room button and each input selection button can also have an IR command and/or an RS-232 command associated with it. Refer to the *System 75C User's Manual* for details.

Commands are transmitted from the switcher's RS-232 projector control port, IR Emitter, or optional IR Broadcaster when the corresponding button is pressed on the IR 701, the SCP control pad, or the switcher's front panel.

### Control functions

**Display Power** — After the System 75C switcher is programmed (set up) with learned or downloaded commands, press this button to toggle the projector's power on or off. The switcher's LCD shows DISPLAY POWER EXECUTING COMMAND during projector power up or down.

**Display Mute** — After setup, this button functions as the display's video mute on/off switch.

 
**Display Mode** — After the switcher is set up, this button activates any RS-232 or IR command stored in its memory.

**Vol + and -** — Press these buttons to adjust the volume of the variable audio output. (See other side.)

CAMBOARD Electronics

## IR 701 Remote Control Instruction Guide

Install two AAA batteries as shown at right.



### Operation

The buttons on the IR 701 duplicate the System 75C's front panel controls for normal operation. See the other side of this card for details. The switcher responds to commands from the IR 701 as if that button or knob were pressed or rotated on the switcher. From a distance of no more than 30 feet, the IR 701 sends infrared (IR) signals to the System 75C via the switcher's front panel IR port or the IR port of an optional SCP 200 or SCP 250 control pad.

**NOTE** Setup operations cannot be performed from the IR 701.

The three Display buttons (**Power**, **Mute**, and **Mode**) will not function until IR and/or RS-232 commands have been stored in their memories. Each Display button can also have a Room command associated with it. Each Room button and each input selection button can also have an IR command and/or an RS-232 command associated with it. Refer to the *System 75C User's Manual* for details.

Commands are transmitted from the switcher's RS-232 projector control port, IR Emitter, or optional IR Broadcaster when the corresponding button is pressed on the IR 701, the SCP control pad, or the switcher's front panel.

### Control functions

**Display Power** — After the System 75C switcher is programmed (set up) with learned or downloaded commands, press this button to toggle the projector's power on or off. The switcher's LCD shows DISPLAY POWER EXECUTING COMMAND during projector power up or down.

 
**Display Mute** — After setup, this button functions as the display's video mute on/off switch.

**Display Mode** — After the switcher is set up, this button activates any RS-232 or IR command stored in its memory.

**Vol + and -** — Press these buttons to adjust the volume of the variable audio output. (See other side.)

## IR 701 Remote Control Instruction Guide

Install two AAA batteries as shown at right.



### Operation

The buttons on the IR 701 duplicate the System 75C's front panel controls for normal operation. See the other side of this card for details. The switcher responds to commands from the IR 701 as if that button or knob were pressed or rotated on the switcher. From a distance of no more than 30 feet, the IR 701 sends infrared (IR) signals to the System 75C via the switcher's front panel IR port or the IR port of an optional SCP 200 or SCP 250 control pad.

**NOTE** Setup operations cannot be performed from the IR 701.

The three Display buttons (**Power**, **Mute**, and **Mode**) will not function until IR and/or RS-232 commands have been stored in their memories. Each Display button can also have a Room command associated with it. Each Room button and each input selection button can also have an IR command and/or an RS-232 command associated with it. Refer to the *System 75C User's Manual* for details.

Commands are transmitted from the switcher's RS-232 projector control port, IR Emitter, or optional IR Broadcaster when the corresponding button is pressed on the IR 701, the SCP control pad, or the switcher's front panel.

### Control functions

**Display Power** — After the System 75C switcher is programmed (set up) with learned or downloaded commands, press this button to toggle the projector's power on or off. The switcher's LCD shows DISPLAY POWER EXECUTING COMMAND during projector power up or down.

 
**Display Mute** — After setup, this button functions as the display's video mute on/off switch.

**Display Mode** — After the switcher is set up, this button activates any RS-232 or IR command stored in its memory.

**Vol + and -** — Press these buttons to adjust the volume of the variable audio output. (See other side.)

## IR 701 Remote Control Instruction Guide

Install two AAA batteries as shown at right.



### Operation

The buttons on the IR 701 duplicate the System 75C's front panel controls for normal operation. See the other side of this card for details. The switcher responds to commands from the IR 701 as if that button or knob were pressed or rotated on the switcher. From a distance of no more than 30 feet, the IR 701 sends infrared (IR) signals to the System 75C via the switcher's front panel IR port or the IR port of an optional SCP 200 or SCP 250 control pad.

**NOTE** Setup operations cannot be performed from the IR 701.

The three Display buttons (**Power**, **Mute**, and **Mode**) will not function until IR and/or RS-232 commands have been stored in their memories. Each Display button can also have a Room command associated with it. Each Room button and each input selection button can also have an IR command and/or an RS-232 command associated with it. Refer to the *System 75C User's Manual* for details.

Commands are transmitted from the switcher's RS-232 projector control port, IR Emitter, or optional IR Broadcaster when the corresponding button is pressed on the IR 701, the SCP control pad, or the switcher's front panel.

### Control functions

**Display Power** — After the System 75C switcher is programmed (set up) with learned or downloaded commands, press this button to toggle the projector's power on or off. The switcher's LCD shows DISPLAY POWER EXECUTING COMMAND during projector power up or down.

**Display Mute** — After setup, this button functions as the display's video mute on/off switch.

**Display Mode** — After the switcher is set up, this button activates any RS-232 or IR command stored in its memory.

**Vol + and -** — Press these buttons to adjust the volume of the variable audio output. (See other side.)

 
 
 
 
 
www.camboard.de

Tel. 07131 911201

ce-info@camboard.de

Fax 07131 911203

# im Vertrieb von IR 701 Remote Control Instruction Guide, continued

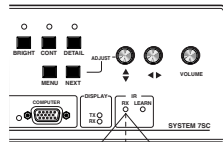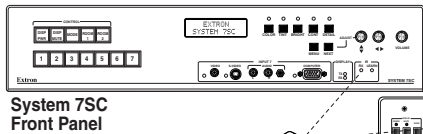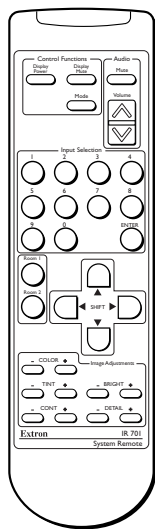

**Room 1, Room 2** — These toggle the switcher's relay contacts to control items such as lights and display screens.

## Input selection

**Input selection buttons** — Press the button(s) for the number of the desired input, then press the **Enter** button to select that input. The corresponding button lights on the System 7SC's front panel.

## Adjustments

The **+** and **-** centering (**H-Shift**, **V-Shift**) and picture adjustment controls (**Color**, **Tint**, **Brightness**, **Contrast**, and **Detail**) increment or decrement the adjustment settings.

**NOTE** While Executive Mode is active, adjustments cannot be made; adjustment controls are locked in Executive Mode.

30 feet max.

IR 701



Extron Electronics, USA  
1230 South Lewis Street  
Anaheim, CA 92805  
USA  
714-491-1500  
Fax 714-491-1517

Extron Electronics, Europe  
Beeldschermweg 6C  
3821 AH Amersfoort  
The Netherlands  
+31-33-453-4040  
Fax +31-33-453-4050

 
 
 
 
 
Extron Electronics, Asia  
135 Joo Seng Road, #04-01  
PM Industrial Building  
Singapore 368363  
+65-6383-4400  
Fax +65-6383-4664

Extron Electronics, Japan  
Daian DMJ Building 6F  
3-9-1 Kudan Minami  
Chiyoda-ku, Tokyo 102-0074 Japan  
+81-3-3511-7655  
Fax +81-3-3511-7656

68-543-01, Rev. B  
03 02  
Printed in the USA.

# CAMBOARD Electronics

## IR 701 Remote Control Instruction Guide, continued

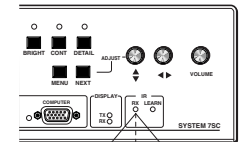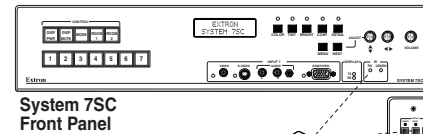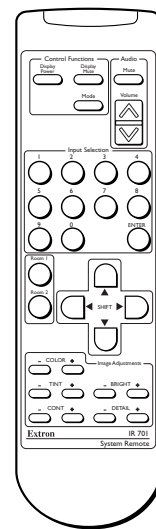

**Room 1, Room 2** — These toggle the switcher's relay contacts to control items such as lights and display screens.

## Input selection

**Input selection buttons** — Press the button(s) for the number of the desired input, then press the **Enter** button to select that input. The corresponding button lights on the System 7SC's front panel.

## Adjustments

The **+** and **-** centering (**H-Shift**, **V-Shift**) and picture adjustment controls (**Color**, **Tint**, **Brightness**, **Contrast**, and **Detail**) increment or decrement the adjustment settings.

**NOTE** While Executive Mode is active, adjustments cannot be made; adjustment controls are locked in Executive Mode.

30 feet max.

IR 701



Extron Electronics, USA  
1230 South Lewis Street  
Anaheim, CA 92805  
USA  
714-491-1500  
Fax 714-491-1517

 
 
 
 
 
Extron Electronics, Europe  
Beeldschermweg 6C  
3821 AH Amersfoort  
The Netherlands  
+31-33-453-4040  
Fax +31-33-453-4050

Extron Electronics, Asia  
135 Joo Seng Road, #04-01  
PM Industrial Building  
Singapore 368363  
+65-6383-4400  
Fax +65-6383-4664

Extron Electronics, Japan  
Daian DMJ Building 6F  
3-9-1 Kudan Minami  
Chiyoda-ku, Tokyo 102-0074 Japan  
+81-3-3511-7655  
Fax +81-3-3511-7656

68-543-01, Rev. B  
03 02  
Printed in the USA.

## IR 701 Remote Control Instruction Guide, continued

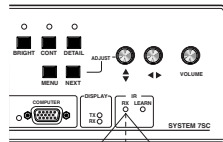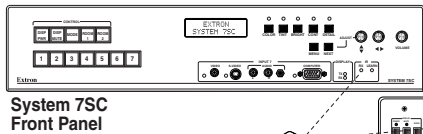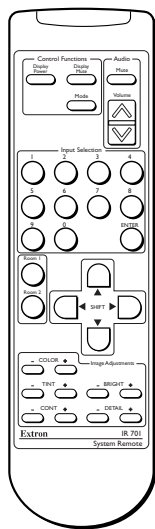

**Room 1, Room 2** — These toggle the switcher's relay contacts to control items such as lights and display screens.

## Input selection

**Input selection buttons** — Press the button(s) for the number of the desired input, then press the **Enter** button to select that input. The corresponding button lights on the System 7SC's front panel.

## Adjustments

The **+** and **-** centering (**H-Shift**, **V-Shift**) and picture adjustment controls (**Color**, **Tint**, **Brightness**, **Contrast**, and **Detail**) increment or decrement the adjustment settings.

**NOTE** While Executive Mode is active, adjustments cannot be made; adjustment controls are locked in Executive Mode.

30 feet max.

IR 701



Extron Electronics, USA  
1230 South Lewis Street  
Anaheim, CA 92805  
USA  
714-491-1500  
Fax 714-491-1517

 
 
 
 
 
Extron Electronics, Europe  
Beeldschermweg 6C  
3821 AH Amersfoort  
The Netherlands  
+31-33-453-4040  
Fax +31-33-453-4050

Extron Electronics, Asia  
135 Joo Seng Road, #04-01  
PM Industrial Building  
Singapore 368363  
+65-6383-4400  
Fax +65-6383-4664

Extron Electronics, Japan  
Daian DMJ Building 6F  
3-9-1 Kudan Minami  
Chiyoda-ku, Tokyo 102-0074 Japan  
+81-3-3511-7655  
Fax +81-3-3511-7656

68-543-01, Rev. B  
03 02  
Printed in the USA.

## IR 701 Remote Control Instruction Guide, continued

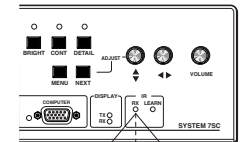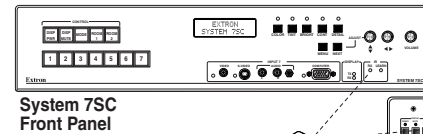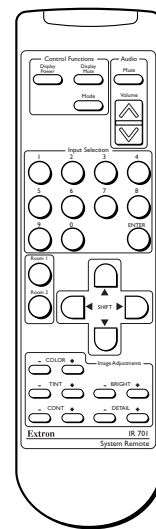

**Room 1, Room 2** — These toggle the switcher's relay contacts to control items such as lights and display screens.

## Input selection

**Input selection buttons** — Press the button(s) for the number of the desired input, then press the **Enter** button to select that input. The corresponding button lights on the System 7SC's front panel.

## Adjustments

The **+** and **-** centering (**H-Shift**, **V-Shift**) and picture adjustment controls (**Color**, **Tint**, **Brightness**, **Contrast**, and **Detail**) increment or decrement the adjustment settings.

**NOTE** While Executive Mode is active, adjustments cannot be made; adjustment controls are locked in Executive Mode.

30 feet max.

IR 701



Extron Electronics, USA  
1230 South Lewis Street  
Anaheim, CA 92805  
USA  
714-491-1500  
Fax 714-491-1517

Extron Electronics, Europe  
Beeldschermweg 6C  
3821 AH Amersfoort  
The Netherlands  
+31-33-453-4040  
Fax +31-33-453-4050

Extron Electronics, Asia  
135 Joo Seng Road, #04-01  
PM Industrial Building  
Singapore 368363  
+65-6383-4400  
Fax +65-6383-4664

Extron Electronics, Japan  
Daian DMJ Building 6F  
3-9-1 Kudan Minami  
Chiyoda-ku, Tokyo 102-0074 Japan  
+81-3-3511-7655  
Fax +81-3-3511-7656

68-543-01, Rev. B  
03 02  
Printed in the USA.

www.camboard.de

Tel: 07131 911201

ce-info@camboard.de

Fax 07131 911203